

# BOOMBOX BT




MT3145



## Features

- Compact Bluetooth stereo speaker with built-in woofer
- Bluetooth 5.1+ EDR
- Protocols: A2DP, AVRCP
- FM radio with autoscans 87.6-108MHz
- MP3 Player
- Supports micro SD memory cards and USB storage devices
- AUX-in
- IR remote controller
- Charging: 5V USB-C
- Built-in lithium battery, works up
- Output power: RMS 15W, PMPO 600W
- 3" woofer, 2 x 2" driver units
- Frequency response: 80 ~ 20000 Hz
- LED display
- Telescopic antenna
- Wooden housing
- Speaker dimensions: 120x195x165mm
- Weight: 1220g
   
# User Manual

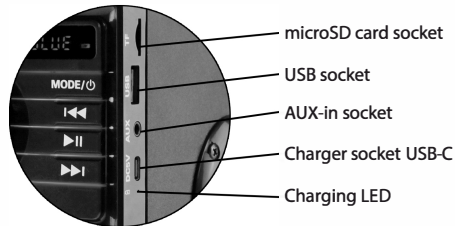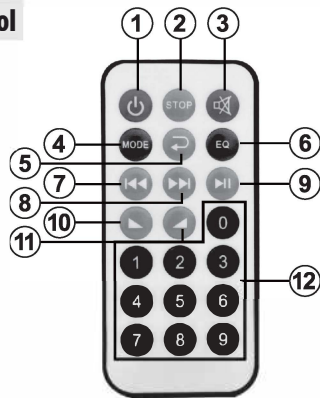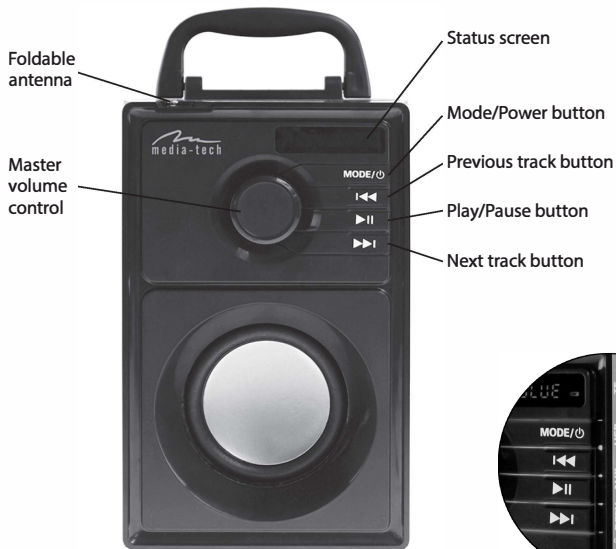

1. Power off button.
2. Stop button
3. Mute button
4. Mode switch: Bluetooth/AUX-in/FM/USB/microSD.
5. Repeat mode
6. EQ\*: Normal/Bass/Pop/Rock/Jazz.
7. Previous track
8. Next track
9. Play/Pause
10. Volume down
11. Volume up
12. Number keys\*: quick select track (enter in following four digit pattern, for instance to enter "5" track enter "0005" and wait)

\*)works only in microSD/USB mode

## Charging

Use USB cable and connect device via charger socket to USB. When charging is in progress red LED will be on, when battery is full - red LED will be off. Full charging takes ca. 4 hours.

**Note! Fully charge device before first use.**

**Important! During charging you can normally use the device, however it is recommended to perform 3 full charging cycles first in order to format built-in battery.**

## Power on/off

Press and hold POWER button for 1 sec, to power off press

and hold again for 1 sec. You can also use remote control to power off device.

## Switching modes

Use MODE button to switch between modes: Bluetooth/microSD/USB/FM radio/AUX-in. Actual mode is displayed on the status screen.

## Volume control

Use master volume knob to set maximum volume level. Use remote control to adjust volume as you like.

## Bluetooth mode

Make sure you are switched into Bluetooth mode, use your smartphone and search for Bluetooth devices. Select "MT3145" on the list to pair device. Device does not require password. When pairing is successful you can open music application. You can use buttons on the device or remote to play/pause, to select previous/next track or adjust volume.

## microSD/USB mode

In this mode you can use standard control like play/pause, next/previous track, volume control. You can also set repeat one/all function, and select one of defined EQ settings. You may also use numeric keyboard to enter specific track.

**Note! Device is always resuming play. If you want to play from beginning enter manually first track "0001".**

## FM radio mode

Please extend foldable antenna. Press and hold PLAY for 2 sec to start autotune function – device will scan FM frequency and save radio stations. When scanning is finished first station will be played, use CH-/CH+ buttons on remote control to switch radio station. You can also use PREVIOUS/NEXT track button on the device to switch radio station. You can shortly press PLAY button to mute/unmute.

## AUX-in mode

In this mode you can only use volume control and PLAY button to mute/unmute.

**Note! Every mute/unmute action, changing track or resuming play is confirmed by “boom” sound – this is normal behavior of device.**

*Due to continuous development specification and appearance of product are subject to change without prior notice. For technical support please visit [www.media-tech.eu](http://www.media-tech.eu).*

**Device is equipped with built-in battery, please remember to charge it once a week.**